

TOOLS: Cable Cutter / Allen Key **EXTRAS:** New Inner Cable / Cable Wire End Crimps.


Fit a CableLubie approx 45mm away from the top gear shifter on the handlebar, have a look on the website in the How To Fit section for image locations if not sure.

If fitting a second CableLubie on the same gear shifter, then adding a CableLubie just before the derailleur is ideal. Some x11 set ups and full length cables can use just one CableLubie it's your choice.

Fill the CableLubie with oil only after setting up the cable so that the whole cable from shifter to derailleur are normally secure as the o seals will be in the optimum position to seal.

Enjoy better gear shifting and be safe riding out.

OPTION 1:
You can add oil with
delivery needle under
the outer chamber

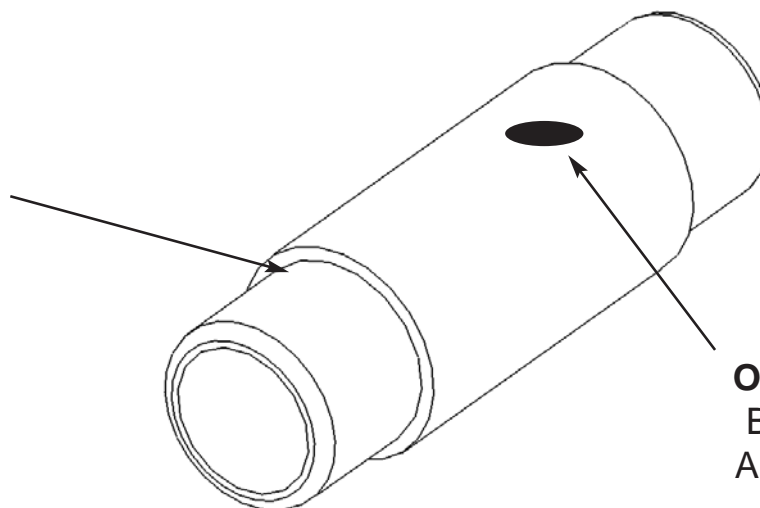

OPTION 2:
Black Dot
Access Slit

TOOLS: Syringe with blunt needle or the ProGold Luber Pen, oil

A small black dot indicates a small slit that has been added to easily allow the applicator of oil to be injected slowly into the CableLubie chamber.

We recommend a suitable oil that is thin enough to lube your cables up.

Two ways to add the oil, either through the slit on the top or slip under the outer rubber chamber.

Only add oil after the gear cable and CableLubie are all setup ready to shift, this provides enough tension for the O seals inside CableLubie to flow the oil through the cable better.